


Replacement Parts List

304-526

FI 2507 & 2507/D


SUPERSEDES: NEW EFFECTIVE: January 17, 2017

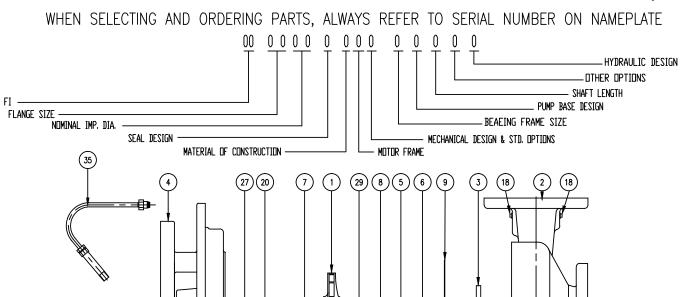

ITCM	NO		2507	2507D	2507D				
		DESCRIPTION	BEARING FRAME	BEARING FRAME	BEARING FRAME				
NO.	KEQ.	D 2001 77011	J	Н	J				
1	1	IMPELLER (CI)	953-559RP	953-5002RP	953-5004RP				
1	1	IMPELLER (BRŹ)	953-1054RP	953-4995RP	953-5003RP				
1	1 1	IMPELLER (SS)	_	953-4996RP	953-5005RP				
2	1	CASING (125#)(NO W/R)	953-588RP	953-4914RP	953-4914RP				
2	1	CASING (250#)(NO W/R)	953-589RP	953-4915RP	953-4915RP				
2	1	CASING (125#)(BRZ W/R)	953-2290RP	953-4912RP	953-4912RP				
2	1	CASING (250#)(BRZ W/R)	953-2291RP	953-4913RP	953-4913RP				
3	1(W/R)	WEAR RING (BRZ)							
		COVER, 125#	953-1166RP	953-4920RP	953-4916RP				
4]]	COVER, 250#	953-1166RP	953-4921RP	953-4917RP				
5	1	DOWDY WASHER	951-2579RP	951-2578RP	951-2579RP				
6	1	IMPELLER BOLT (SST)	1/2NCX1-1/2LG	3/8NCX1-3/4LG	1/2NCX1-3/4LG				
7	1	IMPELLER KEY (SST)	1/4X1/4X2LG	3/16X3/16X1-1/8LG	1/4X1/4X2LG				
8	1	IMPELLER WASHER	953-829RP	953-828RP	953-829RP				
9	1	GASKET (CASING)	953-568RP	953-5007RP	953-5007RP				
14	8	CASING BOLT (SŤ)	3/8NCX1LG	3/8NCX1LG	3/8NCX1LG				
18	3	PIPE PLUG (BRS)	1/4 NPT	1/4 NPT	1/4 NPT				
26	8	CASING WASHER (ŹN)	3/8	3/8	3/8				
29	1	IMPELLER O-RING	953-759RP	953-830RP	953-759RP				
20	4	BEARING FRAME BOLT	1/2NCX1-1/4LG	-/	1/2NCX1-1/4LG				
27	4	BEARING FRAME WASHER	1/2	3/8	1/2				
35	1	TUBE KIT	951-1547RP	951-1547RP	951-1547RP				
	2 2 2 3 4 5 6 7 8 9 14 18 26 29 20 27	NO. REQ. 1	NO. REQ. DESCRIPTION 1 1 IMPELLER (CI) 1 1 IMPELLER (BRZ) 1 1 IMPELLER (SS) 2 1 CASING (125#)(NO W/R) 2 1 CASING (250#)(NO W/R) 2 1 CASING (125#)(BRZ W/R) 3 1(W/R) WEAR RING (BRZ) COVER, 125# COVER, 250# 5 1 DOWDY WASHER 6 1 IMPELLER BOLT (SST) 7 1 IMPELLER KEY (SST) 8 1 IMPELLER WASHER 9 1 GASKET (CASING) 14 8 CASING BOLT (ST) 18 3 PIPE PLUG (BRS) 26 8 CASING WASHER (ZN) 29 1 IMPELLER O—RING 20 4 BEARING FRAME BOLT 27 4 BEARING FRAME WASHER	DESCRIPTION BEARING FRAME	DESCRIPTION BEARING FRAME BEARING FRAME H				

W-1164 Rev-


FI 'H' Frame Replacement Parts

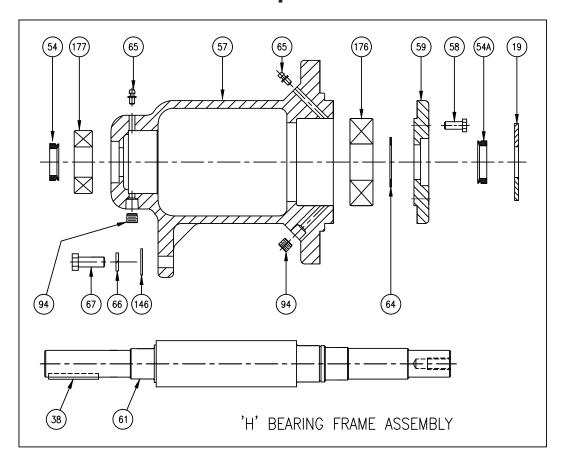

			STANDARD SEALED BEARINGS	OPTIONAL GREASEABLE BEARINGS	
ITEM NO	NO. REQ.	DESCRIPTION	PART NO.	PART NO.	REMARKS
_	1	FRAME ASSEMBLY (CS)	953-2218RP	953-2219RP	CARBON STEEL SHAFT
_	1	FRAME ASSEMBLY (SS)	953-2224RP	953-2225RP	STAINLESS STEEL SHAFT
57	1	HOUSING	953-2205RP	953-2200RP	
61	1	SHAFT (CS)	953-2202RP	953-2202RP	CARBON STEEL
61	1	SHAFT (SS)	953-2204RP	953-2204RP	STAINLESS STEEL
59	1	END CAP	953-2201RP	953-2201RP	
67	1	BOLT, FOOT SUPPORT	10-215RP	10-215RP	
66	1	LOCKWASHER, FOOT SUPPORT	14-101RP	14-101RP	
146	1	FLAT WASHER, FOOT SUPPORT	14-316RP	14-316RP	
38	1	KEY-SHAFT	13-103RP	13-103RP	
176	1	BALL BEARING, FRONT (THRUST)	820-1039RP	820-067RP	
177	1	BALL BEARING, REAR (RADIAL)	953-2216RP	953-2482RP	
19	1	DEFLECTOR	900-043RP	900-043RP	
64	1	RETAINING RING	15-125RP	15-125RP	
58	4	HEX HEAD BOLT, END CAP	10-244RP	10-244RP	
) 54	1	V RING SEAL, REAR	953-1575-5RP	953-1575-5RP	
54A	1	V RING SEAL, FRONT	953-1575-2RP	953-1575-2RP	
65	2	GREASE FITTING		15-203RP	
94	2	PIPE PLUG		16-140RP	

FI 'J' Frame Replacement Parts

(for Bearing Frames manufactured after January 2003 – see note below)

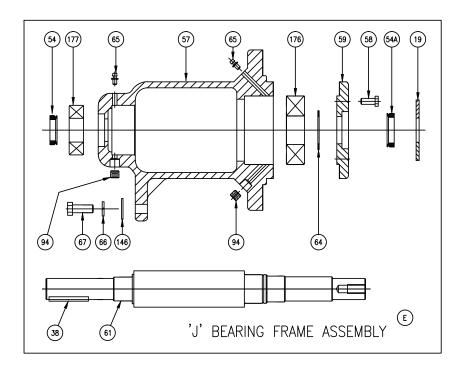


NOTE: Note difference in visual appearance of bearing frames on pages 3 and 4. New frames are a direct replacement for older ones. The part numbers for individual bearings are different from old frames to new frames. If you need help determining which frame you have, please contact tech services at Taco (401-942-8000).

				STANDARD SEALED BEARINGS	OPTIONAL GREASEABLE BEARINGS	
	ITEM NO	NO. REQ.	DESCRIPTION	PART NO.	PART NO.	REMARKS
E	-	1	FRAME ASSEMBLY (CS)	953-2214RP	953-2217RP	CARBON STEEL SHAFT
(E)	ı	1	FRAME ASSEMBLY (SS)	953-2222RP	953-2223RP	STAINLESS STEEL SHAFT
•	57	1	HOUSING	953-2203RP	953-2196RP	
	61	1	SHAFT (CS)	953-2198RP	953-2198RP	CARBON STEEL
	61	1	SHAFT (SS)	953-2199RP	953-2199RP	STAINLESS STEEL
	59	1	END CAP	953-2197RP	953-2197RP	
	67	1	BOLT, FOOT SUPPORT	10-228RP (E)	10-228RP (E)	
	66	1	LOCKWASHER, FOOT SUPPORT	14-102RP	14-102RP	
	146	1	FLAT WASHER, FOOT SUPPORT	14-316RP (E)	14–316RP (E)	
	38	1	KEY-SHAFT	13-110RP	13-110RP	
	176	1	BALL BEARING, FRONT (THRUST)	953-2215RP	950-963RP	
	177	1	BALL BEARING, REAR (RADIAL)	951-5599RP	951-2491RP	
	19	1	DEFLECTOR	951-3040RP	951-3040RP	
	64	1	RETAINING RING	15-140RP	15-140RP	
RevE	58	4	HEX HD BOLT-END CAP	10-207RP	10-207RP	
Sh1 F	54	1	V RING SEAL-REAR	953-1575-3RP	953-1575-3RP	
7, SI	54A	1	V RING SEAL-FRONT	953-1575-3RP	953-1575-3RP	
AW-717,	65	2	GREASE FITTING		15-203RP	
AW	94	2	PIPE PLUG		16-140RP	

FI 'J' Frame Replacement Parts


(for Bearing Frames manufactured prior to February 2003 – see note below)

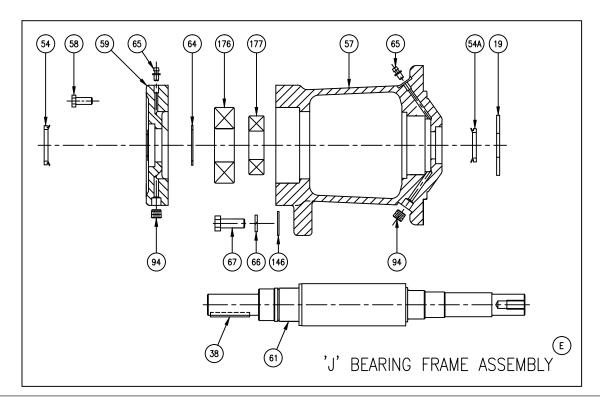

NOTE: Note difference in visual appearance of bearing frames on pages 3 and 4. New frames are a direct replacement for older ones. The part numbers for individual bearings are different from old frames to new frames. If you need help determining which frame you have, please contact tech services at Taco (401-942-8000).

				STANDARD SEALED BEARINGS	OPTIONAL GREASEABLE BEARINGS	
	ITEM NO	NO. REQ.	DESCRIPTION	PART NO.	PART NO.	REMARKS
E	-	1	FRAME ASSEMBLY (CS)	953-1571RP	953-1880RP	CARBON STEEL SHAFT
E	_	1	FRAME ASSEMBLY (SS)	953-1572RP	953-1881RP	STAINLESS STEEL SHAFT
	57	1	HOUSING	953-1565RP	953-1866RP	
	61	1	SHAFT (CS)	953-1658RP	953-1658RP	CARBON STEEL
	61	1	SHAFT (SS)	953-1663RP	953-1663RP	STAINLESS STEEL
	59	1	END CAP	953-1567RP	953-1869RP	
	67	1	BOLT-FOOT SUPPORT	10-234RP	10-234RP	
	66	1	LOCKWASHER-FOOT SUPPORT	14-102RP	14-102RP	
	146	1	FLAT WASHER-FOOT SUPPORT	14-302RP	14-302RP	
	38	1	KEY-SHAFT	13-110RP	13-110RP	
	176	1	BALL BEARING-REAR (THRUST)	953-1871RP	951-155RP	
	177	1	BALL BEARING-FRONT (RADIAL)	953-1876RP	862-101RP	
	19	1	DEFLECTOR	951-3040RP	951-3040RP	
	64	1	RETAINING RING	15-127RP	15-127RP	
RevE	58	4	HEX HD BOLT-END CAP	10-227RP	10-227RP	
Sh2 F	54	1	V RING SEAL—REAR	953-1575-3RP	953-1575-3RP	
	54A	1	V RING SEAL-FRONT	953-1575-4RP	953-1575-4RP	
AW-717,	65	2	GREASE FITTING		15-203RP	
¥	94	2	PIPE PLUG		16-140RP	


FI Series Seal Replacement Parts (EPT)

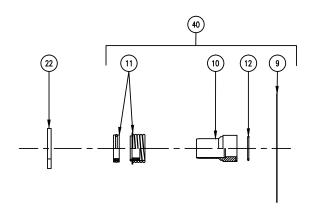

1206, 1506, 2506			1206, 1506, 2506		
1207, 1507, 2007, 2007D 2507D N	2507, 3007, 4075, 4007, 5007, 2507D	N	1207, 1507, 2007, 2007D 2507D N	2507, 3007, 4075, 4007, 5007, 2507D	<u>(</u> 2)
	2508			2508	
1209C 1509C 2009C 2509C	1509, 1509C, 2009, 2009C, 2509, 2509C, 3009, 3009C, 4009, 4009C, 5009, 5009C, 5095, 6009		1209C 1509C 2009C 2509C	1509, 1509C, 2009, 2009C, 2509, 2509C, 3009, 3009C, 4009, 4009C, 5009, 5009C, 5095, 6009	
2510C	2510		2510C	2510	
	1511, 2511, 3011, 4011, 4011C 5011, 6011			1511, 2511, 3011, 4011, 4011C 5011, 6011	
	2013C, 2513 3013, 4013	5013, 6013		2013C, 2513 3013, 4013	5013, 6013

ITEM	м NO.			BEARING FRAME		BEARING FRAME				
	REQ.	DESCRIPTION	H	J L		H J		L		
NO.	KEW.	52501 11511	MEC	HANICAL DESIGN	(125#)	MECH	ANICAL DESIGN (:	250#)		
9	1	GASKET (CASING)	SEE PAGE 1	SEE PAGE 1						
10	1	SLEEVE (SS)	953-1118RP	953-1170RP	953-1172RP	953-1892RP	953-1891RP	953-1890RP		
10	1	SLEEVE (BRŹ)	953-1119RP	953-1171RP	953-1173RP	953-1861RP	953-1887RP	953-1888RP		
11	1	SEAL (TYPE B)	951-3157RP	951-3158RP	951-2966RP	951-3766RP	951-5158RP	951-5151RP		
11	1	SEAL (TYPE D)	951-3159RP	951-3160RP	951-2967RP	951-3781RP	951-5159RP	951-5152RP		
11	1	SEAL (TYPE E)	951-3161RP	951-3162RP	951-2968RP	951-3782RP	951-5160RP	951-5153RP		
11	1	SEAL (TYPE F)	951-6415RP	951-6417RP	951-6419RP	951-6461RP	951-6456RP	951-6448RP		
12	1	SLEEVE "O"-RING	592-525RP	951-3042RP	951-5277RP	592-525RP	951-3042RP	951-5277RP		
22	1	DEFLECTOR	900-043RP	951-3040RP	951-3065RP	900-043RP	951-3040RP	951-3065RP		
40	1	SEAL KIT (TYPE B) SS	953-1549-1RP	953-1549-4RP	953-1549-14RP	953-1549-7RP	953-1549-10RP	953-1549-17RP		
40	1	SEAL KIT (TYPE B) BRZ	953-1549-1BRP	953-1549-4BRP	953-1549-14BRP	953-1549-7BRP	953-1549-10BRP	953-1549-17BRP		
40	1	SEAL KIT (TYPE D) SS	953-1549-2RP	953-1549-5RP	953-1549-15RP	953-1549-8RP	953-1549-11RP	953-1549-18RP		
40	1	SEAL KIT (TYPE D) BRZ	953-1549-2BRP	953-1549-5BRP	953-1549-15BRP	953-1549-8BRP	953-1549-11BRP	953-1549-18BRP		
40	1	SEAL KIT (TYPE E) SS	953-1549-3RP	953-1549-6RP	953-1549-16RP	953-1549-9RP	953-1549-12RP	953-1549-19RP		
3 40	1	SEAL KIT (TYPE E) BRZ	953-1549-3BRP	953-1549-6BRP	953-1549-16BRP	953-1549-9BRP	953-1549-12BRP	953-1549-19BRP		
40	1	SEAL KIT (TYPE F) SS	953-1549-41RP	953-1549-42RP	953-1549-45RP	953-1549-43RP	953-1549-44RP	953-1549-46RP		
40	1	SEAL KIT (TYPE F) BRZ	953-1549-41BRP	953-1549-42BRP	953-1549-45BRP	953-1549-43BRP	953-1549-44BRP	953-1549-46BRP		

Replacement Motor Parts List FI 2507 and 2507D

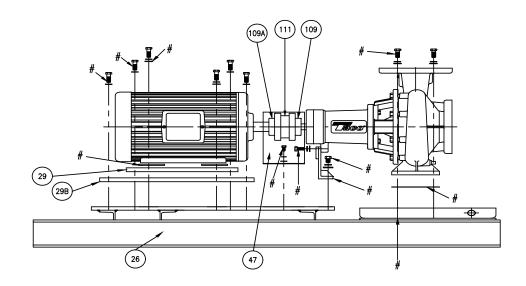

ITEM NO.	NO. REQ.	DESCRIPTION	FI 2507 MOTOR FRAMES (NEMA STD.) "T"												
LINO.	INEQ.		143T 145T	182T	184T	213T	215T	254T	256T	284TS		324TS	326T	364T	365T
47	1		951-3076 951-30											-	-
109	1	PUMP COUPLER HALF	953-2437953-24	37 <mark>953-243</mark> 7	953-2437	953-2437	953-2437	953-2443	953-2443	953-2443	953-2450	953-2450	-	-	-
109A	1	MTR. COUPLER HALF	953-2433953-24	33 9 53-2435	953-2435	953-2437	953-2437	953-2445	953-2445	953-2445	953-2452	-53-2454	-	-	-
111	1		953-2430 953-24											-	-
*	1	OSHA COUPLER GUARD	953-1914 953-19	14 953-2754	953-2754	953-2754	953-2754	953-2755	953-2755	953-2755	953-2755	953-2755	-	-	-
26	1	BASE	953-2263953-28	63 <mark>9</mark> 53-2263	953-2263	953-2263	953-2263	953-2262	953-2262	953-2262	953-2262	953-2262	-	-	-
29	2	SPACER (1ST) MOTOR	951-5202 951-52	02 -	-	-	-	951-6291	951-6291	-	-	-	-	-	-
29B	2	SPACER (2ND) MOTOR	951-5201 951-58	01 -	-	-	-	-	-	-	-	-	-	-	-
29A	4	SPACER RD (1ST) MOTOR		953-2228	953-2228	-	-	-	-	953-2229	953-2229	-	-	-	-
29D	4	SPACER RD (2ND) MOTOR		-	-	-	-	953-2228	953-2228	-	1	-	ı	•	-

	METI		DESCRIPTION			F	1 250	7D M	OTOR	FRAME	S (NE	EMA S	TD.) "	Τ"			
	NO. REQ.	KEŲ.		143T	145T	182T	184T	213T	215T	254T	256T	284TS	286TS		326TS	364TS	365T
[47	1		951-3076												-	-
[109	1		953-2433											-	-	-
[109A	_		953-2433											-	-	-
. [111	1		953-2430												-	-
<u>ا</u> ج	*	1	OSHA COUPLER GUARD	953-1914	953-1914	953-2754	953-2754	953-2754	953-2754	953-2755	953-2755	953-2755	953-2755	953-2755	-	-	-
<u>\$</u>	26	1		953-5183		953-5183	953-5183	953-5182					953-4292	953-2262	-	-	-
Z [29	2	SPACER (1ST) MOTOR	951-5201	951-5201	-	-	-	-	951-6291	951-6291	-	-	-	-	-	-
2	29B	2	SPACER (2ND) MOTOR	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	29A	4	SPACER RD (1ST) MOTOR	-	-	1	-	953-2229		-		953-2229	953-2229	-	-	-	-
₹[29D	4	SPACER RD (2ND) MOTOR	-	-	-	-	_	-	953-2228	953-2228	-	-	-	_	_	-